

# 102 POWER DISTRIBUTION BOX

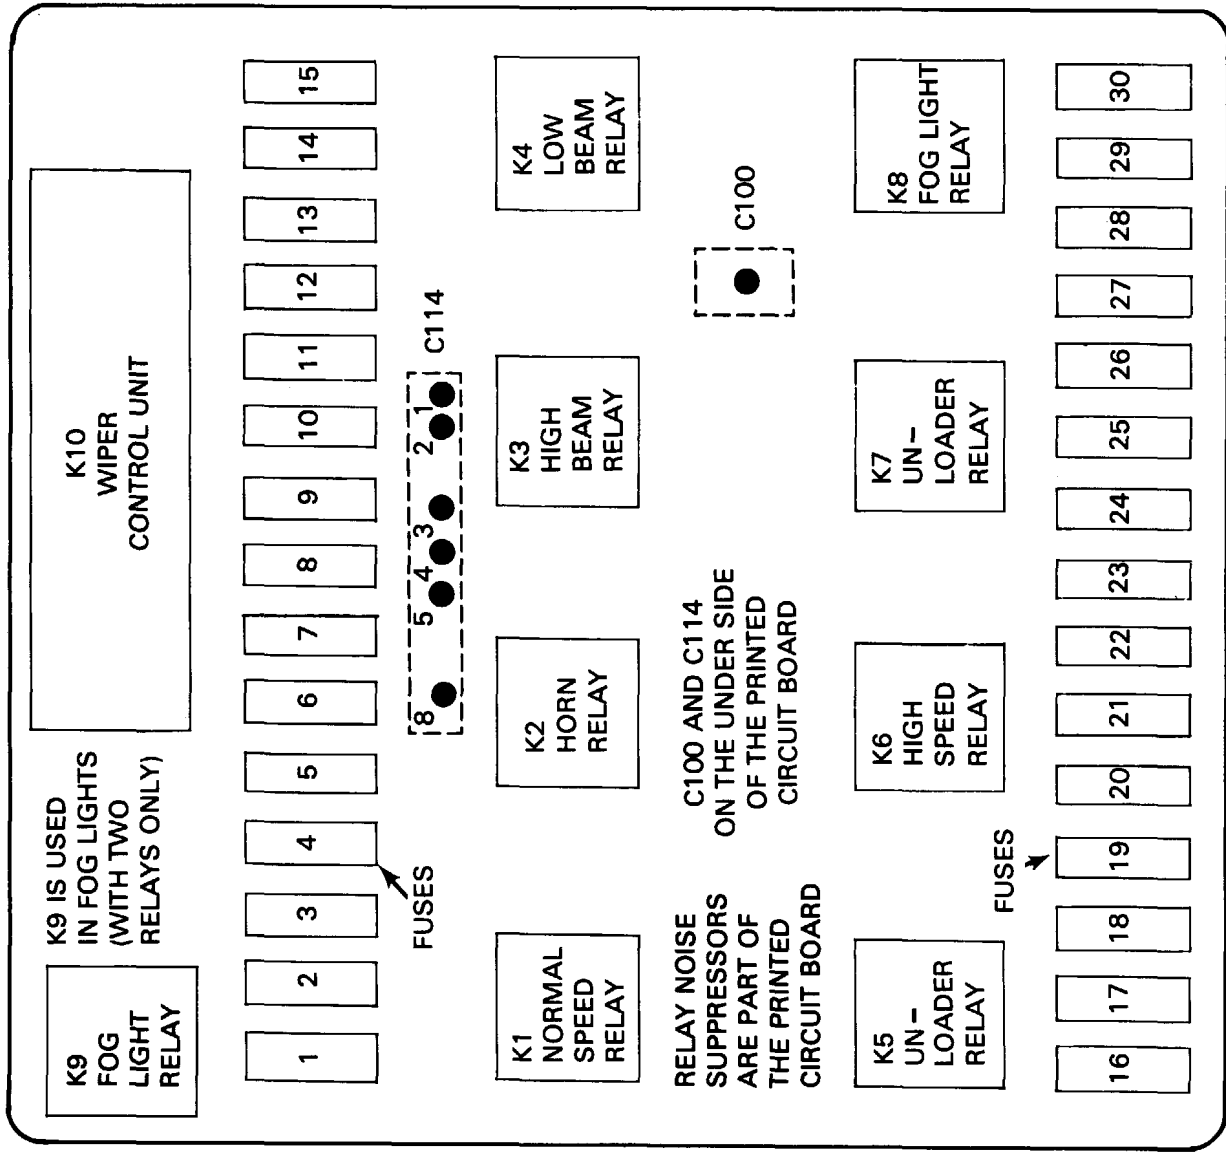


Figure 1 - Behind Left Front Shock Tower

| FUSE NO. | SIZE/COLOR  | CIRCUIT NAME   |
|----------|-------------|--|
| 20       | 30A (LT GN) | Heater/Air Conditioning (also fuse 28).  |
| 21       | 7.5A (BR)   | Auto-Charging Flashlight;<br>Digital Clock;<br>Glove Box Light;<br>Ignition Key Warning;<br>Interior Lights (also fuses 14, 22, 27);<br>Radio (also fuses 12);<br>Trunk Light. |
| 22       | 7.5A (BR)   | Interior Lights (also fuses 19, 21, 27);<br>Lights: Front Park/Tail;<br>Lights: Front Side Marker.   |
| 23       | 7.5A (BR)   | Lights: Dash;<br>Lights: Front Park/Tail;<br>Lights: Front Side Marker;<br>Lights: Rear Marker/License.  |
| 24       | 15A (LT BU) | Lights: Turn/Hazard Warning (also fuse 4);<br>Tachometer/Fuel Economy Gauges (also fuse 10);<br>Service Interval Indicator (also fuse 10).                                     |
| 25       | 25A (WT)    | Not Used.  |
| 26       | 25A (WT)    | Not Used.  |
| 27       | 25A (WT)    | Interior Lights (also fuses 19, 21, 22);<br>Central Locking.   |
| 28       | 25A (WT)    | Cigar Lighter;<br>Power Antenna.   |
| 29       | 7.5A (BR)   | Fog Lights.  |
| 30       | 7.5A (BR)   | Fog Lights.  |

| FUSE NO. | SIZE/COLOR   | CIRCUIT NAME   |
|----------|--------------|--|
| 1        | 7.5A (BR)    | Headlights (also fuses 2, 13, 16).   |
| 2        | 7.5A (BR)    | Headlights (also fuses 1, 13, 14).   |
| 3        | 15A (LT BLU) | Auxiliary Fan (also fuse 18).  |
| 4        | 15A (LT BU)  | Lights: Turn/Hazard Warning (also fuse 24).  |
| 5        | 25A (WT)     | Wiper/Washer.  |
| 6        | 7.5A (BR)    | Stoptlights.   |
| 7        | 15A (LT BU)  | Horn.  |
| 8        | 25A (WT)     | Lights: Dash<br>Rear Defogger;<br>Seatbelt Warning (also fuse 10);<br>Speedometer/Indicators (also fuse 12).   |
| 9        | 15A (LT BU)  | Idle Speed Control/Vacuum Advance;<br>Backup Lights.   |
| 10       | 7.5A (BR)    | Seatbelt Warning (also fuse 8);<br>Service Interval Indicator (also fuse 24);<br>Tachometer/Fuel Economy Gauges (also fuse 24);<br>Gauges/Indicators;<br>Brake Warning System. |
| 11       | 15A (LT BU)  | Fuel Delivery.   |
| 12       | 7.5A (BR)    | Radio (also fuse 21);<br>Speedometer/Indicators (also fuse 8).   |
| 13       | 7.5A (BR)    | Headlights (also fuses 1, 2, 14).  |
| 14       | 7.5A (BR)    | Headlights (also fuses 1, 2, 13).  |
| 15       |              | Not Used.  |
| 16       |              | Not Used.  |
| 17       | 15A (LT BU)  | Accessory Connector.(Not Used)   |
| 18       | 30A (LT GN)  | Auxiliary Fan (also fuses 3, 19).  |
| 19       | 7.5A (BR)    | Auxiliary Fan (also fuses 3, 18);<br>Interior Lights (also fuses 21, 22, 27);<br>Power Mirrors.  |